


22. Bowthruster

Bowthruster located in space under the bed of bow starboard cabin



Switch on button for thruster activated

Bowthruster switch

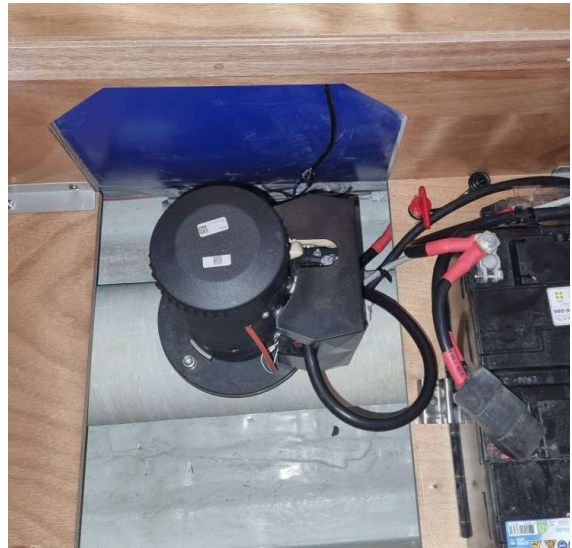

Remote control of bowthruster Quick (maximum time of continuous operation 5 seconds).

