
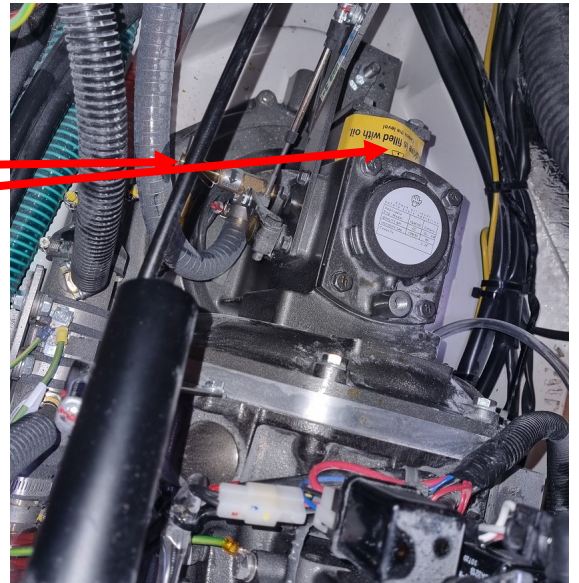


#### 4. Daily Engine Checks

- Check the oil level using the yellow dip stick located to the left rear of the engine. The level should be at least halfway between the empty and full marks. To add oil open the oil filler cap on the top of the engine.
- To the rear left of the engine is the seawater filter. Please do not touch this unless instructed to do so.
- To the rear right of the engine is the engine coolant reservoir. The coolant level should be between the maximum and minimum lines.
- Check for any engine leaks or bilge water below engine.
- Check the belt for any damage and correct tension.

**ANY PROBLEMS CALL** Technical support.

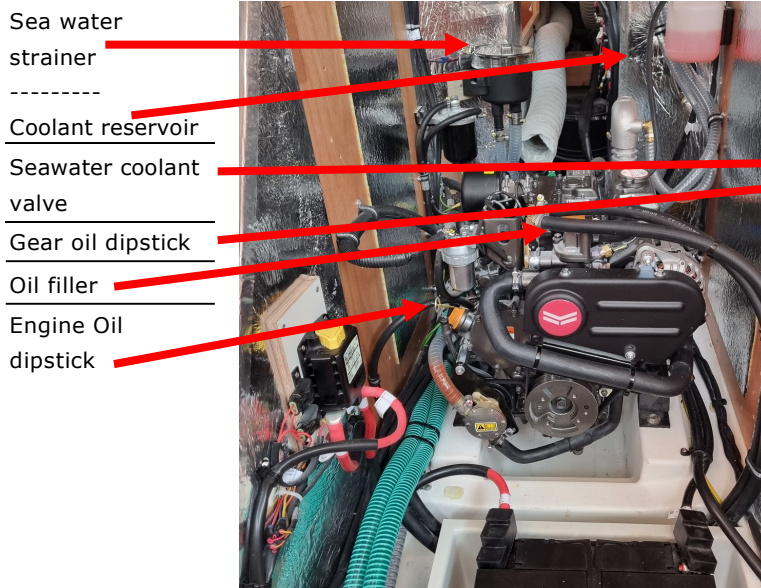

#### **FUEL SYSTEM**

The fuel tank has a capacity of 250 liters. The fuel tank is stowed under the bed of starboard aft cabin. **Filling the fuel tank:**

- Fill the fuel tank with diesel via the deck filler.
- The fuel filler is marked "DIESEL". Unscrew the plug using a winch handle.
- Fill the fuel tank slowly in order to avoid spilling fuel on the deck.
- In case of spilling fuel on the deck, clean it immediately using a detergent and a large amount of fresh water.
- Keep the fuel tank full because a low fuel level can cause air penetration and improper engine operation and stoppage.
- Close the carefully and screw it tight.

**When filling the tank, turn off the engine and do not smoke**



Emergency fuel shut-off  
(Stbd aft cabin under bunk)