20. Risk of damage

! Always keep close the hatch windows shown below to avoid damage of hatches by rope of Jib and boom.



- ! In reverse gear when the yacht is going astern, with the propeller "walking" the stern to starboard (right side).
- ! Due to the overload of coastal sea , please book in advance Marinas, Restaurants and buoys berthing for your restful sleep on the yachts:
 - a. https://my-sea.com/en
 - b. https://book.aci-club.hr/
- ! Check daily forecast on:
 - -http://meteo.hr
- -https://www.windfinder.com/weatherforecast/poljica_trogir
 (only 3 days superforecast page)
 - https://www.windy.com/-Wind-gusts-gust
 - ! Be very carefully with the sheet, mooring line in order to avoid winding on the engine and bow thruster propeller.

Spare engine propeller located under the saloon seat.