

11. Fresh water system

Yacht has a water capacity of 360 l shared between two tanks. Before filling the tank let the water run from the hose for a while before placing the end into the filler that is located on the transom and the bow. **Please ensure that the correct fillers are used, NOT the holding tanks or the diesel fill.**




To use the fresh water system, turn on the fresh water breaker on the 12v panel and open a faucet. **When a tank runs out of water, the pump will run at high speed and the faucet will start to cough air. As soon as you hear the pump running continuously, check to see if anyone is using water. If not, switch off the pump immediately to prevent the pump from drawing more air into the system or the pump overheating.**

Use the menu key on the 12v panel to confirm if your tank is empty.

Menu Key



Water tank change over valve

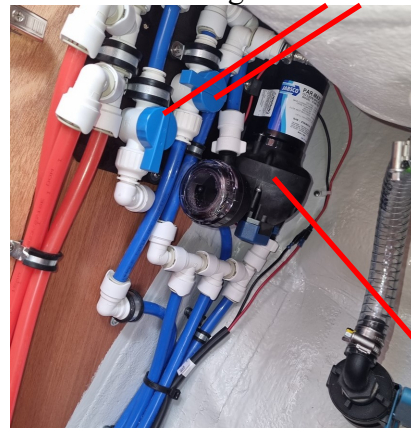

water pump

To switch tanks:

- Switch off water pump
- Select the next full tank: the valve is located under the sink in the port aft head.
- The valve has two positions (horizontal and vertical) that select one or other tank. After selecting required tank:
- Switch on water pump.
- Open cold water faucet at galley and purge system of air, approx. 45 seconds
- Turn off faucet, pump will continue to run until adequate pressure has built up to operate pressure switch to cut the pump out.
- If pump does not cut out, it may be necessary to repeat the purging process and open other faucets
- If you have any problems, call technical support.