

### 30.BOW THRUSTER

Fuse of bowthruster located in space under the bed of bow cabin and spare engine propeler also.



Thruster button must be on when use the bowthruster.



Remote control of bowthruster Quick  
(maximum time of continuous operation 5  
seconds to avoid overloading)