

### 33. Heating

Turn on the heating by pressing the lower button on the remote control, after which the fuel pump will make a click every second.



After 5 minutes, the heating will begin to work.

Turn off the heating by pressing the lower button on the remote control.